GB WAE 8778/1

PROGRAMME GUIDE

This washing machine is equipped with **automatic safety functions** which detect faults at an early stage and react appropriately, e.g.:

A. "Tap Off" indicator

Check your washing machine's water supply.

B. "Water Stop" indicator

Can be released by excess foaming or a leak in the appliance (see also instructions for use "Troubleshooting").

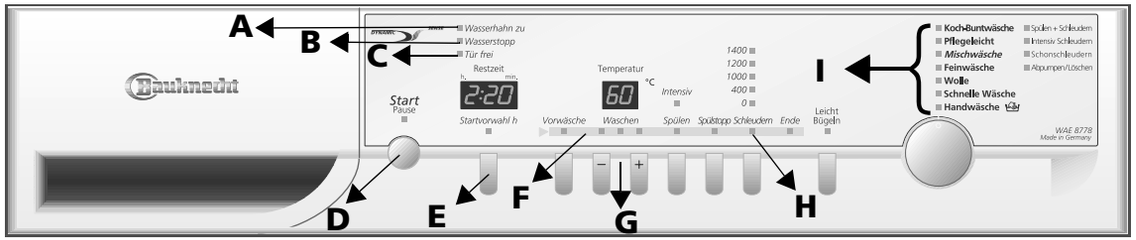

C. "Door Free" indicator
D. "Start/Pause" button
E. "Start Delay" button
F. Programme sequence indicator

G. Temperature selection buttons
H. "Speed Reduction" button
I. Operation indicators

Programme	Care Labels	Type of wash/ Degree of soiling	Max. load	Detergent and Additives			Selectable special options = ❇						Tempe-rature	Max. spin speed	Notes
				Softener	Main wash	Pre-wash	Start delay *Start-vorwahl h*	Pre-wash *Vor-wäsche*	Intensive Rinse *Intensiv Spülen*	Rinse Hold *Spül-stopp*	Speed reduction *Drehzahl-reduzierung*	Easy ironing *Leicht Bügeln*			
			Kg										°C	rpm	
Coloured Cotton *Koch-Buntwäsche*	95 60 30 40	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	❇	Yes	❇	❇	❇	❇	❇	❇	❇	20 to 95	1400	"Prewash" can be additionally selected for heavily soiled laundry at any temperature.
Synthetic *Pflegeleicht*	60 50 40 30	Normally soiled blouses, shirts and other outer clothing made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or mixtures of these fibres with cotton.	2.5	❇	Yes	❇	❇	❇	❇	❇	❇ [1]	❇	20 to 60	1000 [1]	"Prewash" can be additionally selected for heavily soiled laundry.
Daily Mixed *Mischwäsche*	60 30	Slightly to normally soiled textiles made of cotton and/or synthetic fibres.	3.0	❇	Yes	—	❇	—	❇	❇	❇	❇	30 to 60	1400	In this programme, selection of the special option "Prewash" is not possible. In this programme the spin speed should be adapted to the fabrics.
Delicate *Feinwäsche*	30 40	Curtains and delicate dresses, skirts, shirts and blouses.	1.5	❇	Yes	❇	❇	❇	—	❇	❇ [1]	—	20 to 40	1000 [1]	In this programme, selection of the special options "Intensive Rinse" and "Easy ironing" is not possible.
Wool *Wolle*		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	1.0	❇	Yes	—	❇	—	—	❇	❇ [1]	—	20 to 40	1000 [1]	If you select "Rinse Hold" do not leave items to soak for too long.
Rapid wash *Schnelle Wäsche*	60 50 40 30	Hardly worn outer and sport clothing made of cotton, polyester, polyamid and mixed cotton fabrics.	3.0	❇	Yes	—	❇	—	—	❇	❇	—	20 to 60	1400	In this programme, selection of the special options "Prewash", "Intensive Rinse" and "Easy Ironing" is not possible.
Handwash *Handwäsche*		Textiles made of linen, silk, wool or viscose marked as "handwashable".	1.0	❇	Yes	—	❇	—	—	❇	❇ [2]	—	20 to 30	400 [2]	If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.
Rinse + Spin *Spülen + Schleudern*	—	—	5.0	❇	—	—	❇	—	❇	❇	❇	—	20	1400	Same as the spin cycle in the "Coloured Cotton" programme.
Intensive spin *Intensiv schleudern*	—	—	5.0	—	—	—	❇	—	—	—	❇	—	—	1400	In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.
Gentle spin *Schonschleudern*	—	—	1.5	—	—	—	❇	—	—	—	❇ [1]	—	—	1000 [1]	A very gentle spin is used in this programme. Same as the spin cycle in the "Wool" programme.
Drain / Cancel *Abpumpen / Löschen*	—	—	—	—	—	—	❇	—	—	—	—	—	—	—	This programme only drains (alternative method of terminating the programme after "Rinse Hold" without spinning). In addition all running programmes can be cancelled with this programme.

[1] For improved garment care spin speed is restricted to 1000 rpm in this programme.
[2] For improved garment care spin speed is restricted to 400 rpm in this programme.

5019 401 15134

CONSUMPTION DATA

Programme	Temperature (°C)	Wash (kg)	Water (l)	Energy (kWh)	Programme duration ** approx. (hours : minutes)
Coloured Cotton	95	5.0	44***	1.60	1:55
Coloured Cotton	60	5.0	39	0.95	2:00
Coloured Cotton	40	5.0	39	0.55	2:00
Daily Mixed	40	3.0	45	0.51	1:00
Synthetic	60	2.5	55***	0.70	1:30
Synthetic	40	2.5	50	0.50	1:15
Rapid wash	30	3.0	35	0.40	0:30
Delicate	30	1.5	50	0.50	0:45
Wool	40	1.0	50	0.50	0:40
Handwash	30	1.0	35	0.40	0:35

* Consumption **values** were measured in normalized conditions in compliance with Standard IEC 60456.
** The **programme duration** may also vary from the chart values. The washing machine is able to allow for particular household conditions and to adapt the programme run time accordingly.
*** To reduce **the water temperature**, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

POUR IN DETERGENT, CLOSE THE DOOR AND SELECT A PROGRAMME

Add the detergent as described in the chapter "Detergent and Additives" in the booklet.

1. Turn the **programme selector knob** in any direction to the desired programme. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the pilot lamp above the **"Start/Pause"** button is flashing.
2. The programme sequence indicator and the indicator with the maximum possible spin speed light up.
3. The temperature can be altered by pressing the **"+"** or **"-"** button under the corresponding LED display.

SELECT SPECIAL OPTIONS - The indicator lights go on.

"Prewash" button
- Only for heavily soiled laundry (for example sand or granular dirt). Programme duration is increased by some 15 min.

"Intensive Rinse" button
- An additional rinse cycle is carried out.
- This additional option is particularly suitable for areas with very soft water, for washing baby linen and helping people with detergent allergies.

"Rinse Hold" button
- The laundry remains in the last rinse water without being spun: discoloration of the laundry and additional creasing are prevented.
- This additional option is particularly recommended for the programme "Synthetics" or "Delicates".
- This additional function is particularly useful if you want to postpone spinning to a later time.

Note: The programme has reached the "Rinse Hold" when the "Rinse Hold" button light flashes.

Terminate the "Rinse Hold" option:
- Press the "Rinse Hold" button again; the programme will terminate automatically with the appropriate spin cycle for the current programme.
- If you do not wish to spin the clothes, turn the programme selector knob to "Drain/ Cancel" and press the "**Start/Pause**" button again.

"Speed Reduction" button
- A maximum spin speed is assigned to each programme.
- Press the button to set another speed for the spin cycle.
- If the spin speed "0" is selected, the final spin is cancelled. The water is only drained out.

"Easy Ironing" button
- To lessen creasing, the water quantity is increased and the clothes are spun very gently at reduced power. This makes your laundry significantly damper at the end of the programme.

START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.
- Press the "Start Delay" button. Select the programme start from 1 to 19 hours ahead by pressing the button again.
- Press the **"Start/Pause"** button. The Start Delay indicator light flashes until the programme starts.
- During programme start the remaining time appears in the digital display.

"Start Delay" correction.
- Before the "Start Delay" has been started:
  The preset number of hours can be altered by continuously pressing the "Start Delay" button.
  The number of hours can be reduced by first turning the programme selector switch to the "Off" position. Then set the programme again and select the desired number of hours.
- After the "Start Delay" has been started:
  The preset number of hours can be reduced by pressing the "Start Delay" button again. To increase the number of hours preselected, first turn the programme selector switch to the "Off" position. Then set the programme and the additional options again and select the desired number of hours.

PROGRAMME START

After you have selected the programme and the additional option, the indicator light over the **"Start/Pause"** button flashes. Turn on the tap and start the programme by pressing the **"Start/Pause"** button. Now the indicator light above the button goes on.

In addition, all programme phases are indicated by the associated lights. After the end of a programme phase the associated indicator light goes out. Thus the programme sequence indicator moves from left to right across the wash, rinse and spin phases. At the end of the programme only the "End" indicator is still on.

DOOR LOCK

In the first 15 minutes after the start of the "Cotton", "Cotton coloured" and "Synthetic" programmes the door can be opened to add further laundry. This is not possible if "Rapid Wash" is selecte.

PROGRAMME END

- The remaining time display shows "0:00" and the "End" indicator lights up.

1. Turn the programme selector knob to the "Off" position.
2. Turn off the tap.
3. Open the door and unload the machine.

RESELECT AFTER PROGRAMME START

A newly-selected programme will continue in the same programme section during which the current programme was interrupted. Therefore do not add any more detergent.

1. Press the **"Start/Pause"** button to interrupt the programme. The indicator light flashes.
2. Select the new programme (with temperature), any additional options and - if you wish - another spin speed.
3. Press the **"Start/Pause"** button again to restart the programme.

- If you are in the "Prewash" programme step this additional option can not be deselected as described (to do this see "Interrupt/Cancel Programme).

CANCEL/DELETE PROGRAMME

1. Press the **"Start/Pause"** button to interrupt the programme. The indicator light flashes.
2. Set the programme selector to "Drain/ Cancel". The spin speed **"0"** and the remaining time "2 minutes" are displayed.
3. Press the **"Start/Pause"** button to start the "Drain/Cancel" programme.